


How To Change IP Address




MANUAL

1. To change the IP address, please login to the web GUI:

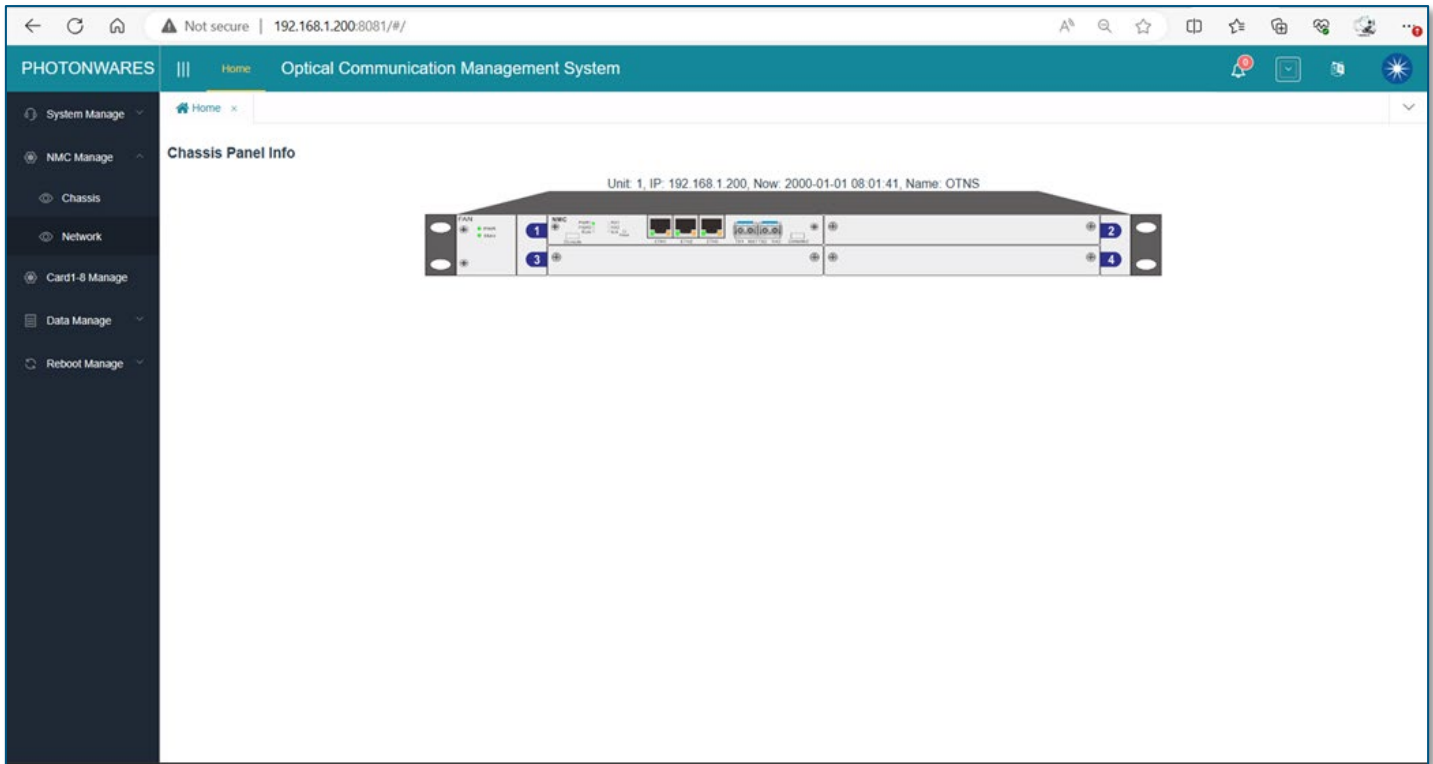

2. Click 'NMC Manage', 'Network', on the left side panel you'll see the Network configuration page:

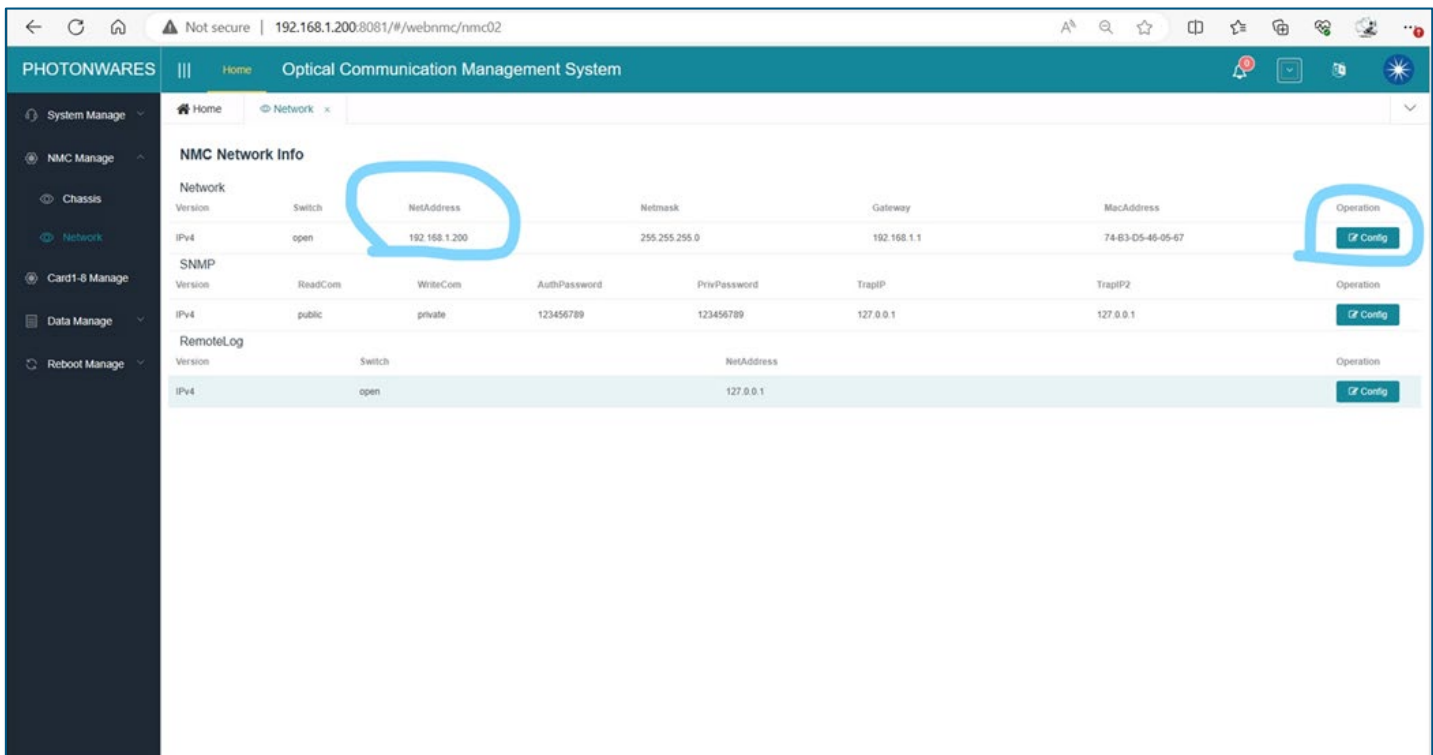

How To Change IP Address

3. Click 'Config' to change the IP address according to your network settings.

Configuration ✕

Version	IPv4
NetAddress	<input type="text" value="192.168.1.200"/>
Netmask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.1.1"/>