

Single mode, up to 10mW, 1nm, Benchtop or Module



**DATASHEET** 

Return to the Webpage N





#### **Features**

- Turnkey Laser Source
- High Stability
- Advanced Feedback Control

### **Applications**

- Medical Laser Treatment
- Biotechnology
- Others



Agiltron provides cost-effective fiber-coupled laser sources with a wide range emitting spectrum from 370nm to 2000nm and line width from 10kHz to broadband to select. Each benchtop laser source features a pigtailed laser and high-precision, low-noise auto-feedback drive electronics to ensure constant output power or a constant driving current, and an integrated temperature control unit maintains optimal operating conditions. Each unit features a front fiber output connector and a universal power supply compatible with 100 to 240 VAC. We offer two packages: benchtop for ease of use and compact module for system integration. The user interface benchtop includes an intuitive LCD display for independent control of output power and temperature via two front rotating knobs. The module has two front output power and temperature settings. All units have a built-in isolator option to prevent reflection-induced laser emissions instability. We produce fiber-coupled isolators from 370nm to 2000nm. An isolator is essential to obtain stable laser output.

### **Specifications**

Parameter	Min	Typical	Max	Unit
Threshold Current		50	80	mA
Forward Current		100	150	mA
Forward Voltage		1.9	2.2	V
Optical Output Power	8	10	15	mW
Center Wavelength@25°C	768	775	785	nm
Wavelength v/s Temperature Coefficient		0.3		nm/°C
Spectral Linewidth (FWHM)		1.5	4	nm
Rise Time in Pulse Mode		0.5		ns
Monitor Current @ VrPD=5V	0.2			mA
PD reverse voltage			20	V
TEC Current			0.5	Α
Operating Temperature (heatsink temperature)	-10		+70	°C
Storage Temperature	-40		+70	°C

**Note:** The specifications provided are for general applications with a cost-effective approach. If you need to narrow or expand the tolerance, coverage, limit, or qualifications, please [click this <u>link</u>]:

Rev 01/16/25

© Photonwares Corporation





Single mode, up to 10mW, 1nm, Benchtop or Module



**DATASHEET** 

#### **Benchtop Laser Source Operation Manual**



- Plug in power cable
- Turn on Power Switch
- Setting the Output Power by rotating the knob
- Setting the laser diode Temperature by rotating the knob
- Connect a fiber path cable with matching connector (FC/APC is the default)
- Push the Emission switch to turn on the laser
- Measure the output power to verify

#### **Module Laser Source Operation Manual**



- Plug in power cable
- Turn on Power Switch
- Setting the Output Power by rotating the screw
- Setting the laser diode Temperature by rotating the screw
- Connect a fiber path cable with matching connector (FC/APC is the default)
- Push the Emission switch to turn on the laser
- Measure the output power to verify





Single mode, up to 10mW, 1nm, Benchtop or Module



DATASHEET

#### **Mechanical Dimension (mm)**

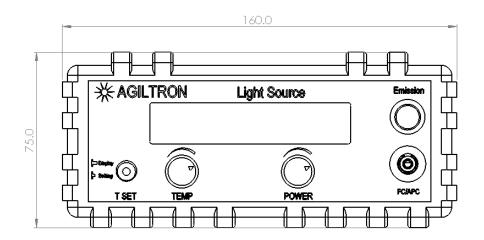

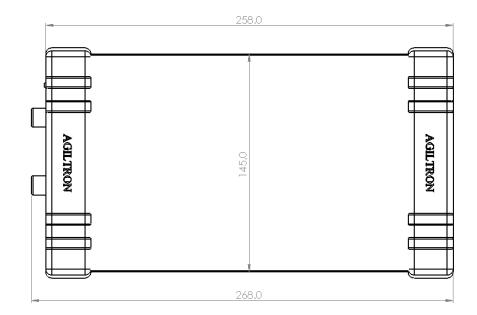






Single mode, up to 10mW, 1nm, Benchtop or Module



#### **Typical Spectrum**

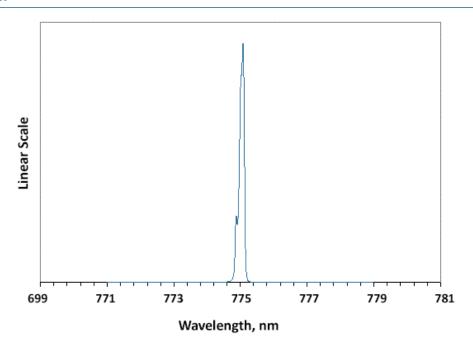

#### **Ordering Information**

© Photonwares Corporation

Prefix	Wavelength	Power	Linewidth	Package	Isolator	Control Mode	TEC Cooling	Fiber Type	Connector
FCLS-	775nm = 0775	10mW = A	1nm = 1	Benchtop = 1 Module = 2	None = 1 Yes = 2	Constant Current = 2 Constant Power = 1	No = 1 Yes = 2	Hi780 = 7 PM780 = D Special = 0	FC/APC = 3 FC/PC = 2 Non = 1 SC/PC = 4 SC/APC = 5 LC/PC = 7 LC/UPC = U Special = 0